



FO-D

Gravity Vent Damper


The Gravity Vent Damper can be installed on a louvered fireplace to add some control to the Gravity Vent (FO-V2). In the open position, most of the heat generated by the fireplace will evacuate through the gravity vent ducts. In the close position, most of the heat generated by the fireplace will come out of the upper louver(s).

❖ **WARNING: NO SUBSTITUTION OF ANY OF THESE PARTS IS ALLOWED. THE USE OF ANY SUBSTITUTE WILL DECERTIFY THE SYSTEM AND MAY PUT YOUR SAFETY AT RISK.**

INSTALLATION

❖ **WARNING: YOU CAN ONLY INSTALL A GRAVITY VENT DAMPER ON A FIREPLACE THAT HAS ALL UPPER AND BOTTOM LOUVERS INSTALLED. YOU CANNOT INSTALL A GRAVITY VENT DAMPER ON A CLEAN FACE FIREPLACE OR A FIREPLACE WITH A BLOCKED UPPER LOUVER.**

1. Remove the top louver. On any Delta fireplace, the damper is installed through the left upper louver only.
2. Follow the gravity vent kit installation instructions up to and including the installation of the gravity vent starter.
3. Turn the gravity vent starter so that the slot faces the front of the fireplace and the two holes face the back of the fireplace.
4. While holding the gravity vent damper by the wood handle, insert the gravity vent damper through the top louver opening. Insert the gravity vent damper rod through the hole in the gravity vent starter: choose the hole that allows the damper rod to rest the closest against to inner top casing. Then slide the damper rod through the slot. Make sure that the small washer is on the inside and that the large washer and spring are on the outside of the gravity vent starter. The gravity vent damper should stay in place and be able to turn. Install the pipe strap with the self-tapping screws provided to hold the gravity vent damper rod in place (see Figure 1).
5. Replace the louver. The gravity vent damper handle should protrude above the top of the louver.
6. Continue with the installation of the Gravity Vent Kit.

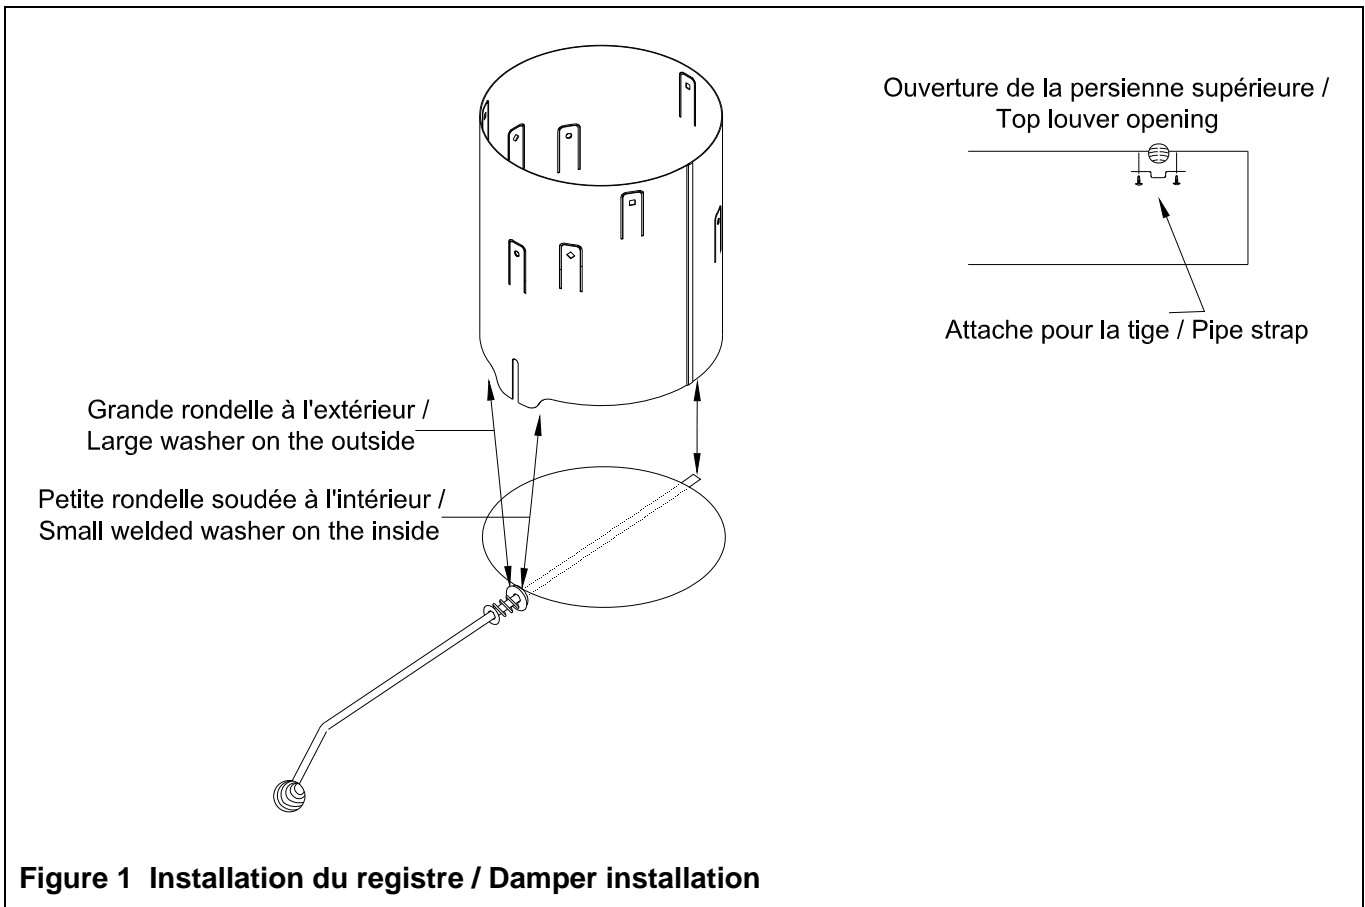

Liste de contrôle / Check List:

- 1 Registre d'évent par gravité / Gravity vent damper (1.13.D.01.DP)
- 1 Sac contenant 2 vis auto-taraudeuses #8 x1/2" (901010),
Bag containing 2 self-tapping screws
- Notice d'installation et liste de contrôle / Instructions and check list

1 attache 3/8" (912002)
1 pipe strap



**INITIALES
INITIALS**